Setting the time and date. PR710, PR720, PR730, PR5100

Setting The Date

- 1. Ensure that the slide switch is set to the normal operating position. This will be "GT ON" or "GT OFF" for the PR710. "ITEM", "PRT" or "ON" for the PR720 & PR730. Do not leave in "RATE" or "CURRENCY" position.
- 2. Press the **Time/Date** key. The date will show.
- 3. Press the "Time Set (X)" key & hold for at least 2 seconds until the first digit starts flashing.
- 4. Enter the month first (2 digits), then the day (2 digits) & then the year (4 digits). e.g. for 25th January 2005 enter "01 25 2005"
- 5. Press the "Time Set (X)" key again & the digits will stop flashing.
- 6. The date is now set.

Changing the Date Format

On intitial operation the date format defaults to USA style i.e. Month, Day, Year. This can be changed to UK format (Day, Month, Year).

- 1. Check that no slide switch is set to "CURRENCY" or "RATE"
- 2. Press the **Time/Date** key to display the date if not already showing.
- 3. Press the "% (FORMAT)" key until the required date format is showing.

Default Format: MM-DD-YYYY	Format 2: DD-MM-YYYY	Format
3: YYYY-MM-DD		

Setting the Time

- 1. Ensure that the slide switch is set to the normal operating position. This will be "GT ON" or "GT OFF" for the PR710. "ITEM", "PRT" or "ON" for the PR720 & PR730. Do not leave in "RATE" or "CURRENCY" position.
- 2. Press the **Time/Date** key twice. The time will show.
- 3. If a letter "P" (PM) or "A" (AM) is shown on the right of the display this indicates 12 hour clock mode. If no letter is shown on the right of the display then the clock is in 24 hour mode.
- 4. To change the mode from 12 to 24 hour & vice versa, press the "12/24 (divide)" key.
- 5. Press the "Time Set (X)" key & hold for at least 2 seconds until the first digit starts flashing.
- 6. Enter the time.
- 7. Press the "Time Set (X)" key again & the digits will stop flashing.
- 8. The time is now set.